



1870569

Morgan Storage Hutch – Antique White
Parts and Hardware List

A.	Top Assembly	1 pc
B.	Left Side Panel	1 pc
C.	Right Side Panel	1 pc
D.	Fixed Shelf	1 pc
E.	Middle Panel	1 pc
F.	Right Back Panel	1 pc
G.	Left Back Panel	1 pc
H.	Bottom Panel	1 pc
I.	Dividers	3 pcs
J.	Connecting Bolts	8 pcs
K.	Adjustable Shelf	1 pc
L.	Eccentric Cams	8 pcs
M.	Plastic Caps	8 pcs
N.	Pan Head Screws (M6x 12)	30 pcs
O.	Long Phillips Head Screws (M6x 15)	8 pcs
P.	Short Phillips Head Screws (M8x 12)	2 pcs
Q.	Confirmat Screws	4 pcs
R.	Allen Head Bolts	2 pcs
S.	Flat Washers	2 pcs
T.	Lock Washers	2 pcs
U.	Phillips Head Screwdriver	1 pc
V.	Flat Head Screwdriver	1 pc
W.	Shelf Supports	4 pcs
X.	Angle Braces	2 pcs
Y.	Connecting Plates	2 pcs
Z.	Allen Head Wrench	1 pc

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * Use the hardware illustrations to determine correct piece and size.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * This item is to be assembled by an adult and is not intended to be taken apart by a child.


BOMBAY

1870569

Morgan Storage Hutch – Antique White
Hardware Illustrations




J. Connecting Bolt

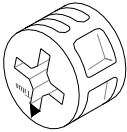


L. Eccentric Cam




N. Pan Head Screw (M6 x 12)




Q. Conformat Screw




S. Flat Washer



W. Shelf Support



Y. Connecting Plate

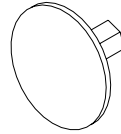


M. Plastic Cap




O. Long Phillips Head Screw (M6 x 15)




P. Short Phillips Head Screw (M8 x 12)



R. Allen Head Bolt



T. Lock Washer

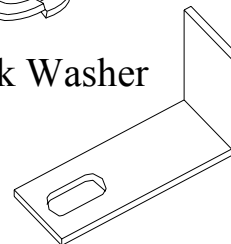

X. Angle Brace



1870569

Morgan Storage Hutch – Antique White

Attach the Side Panels

Parts required

A.	Top Assembly	1 pc	L.	Eccentric Cams	4 pcs
B.	Left Side Panel	1 pc	M.	Plastic Caps	4 pcs
C.	Right Side Panel	1 pc	V.	Flat Head Screwdriver	1 pc
J.	Connecting Bolts	4 pcs			

1. Place the Top Assembly (A) upside down on the floor. Insert the Connecting Bolts (J) into the pre-threaded holes of the Top Assembly (A) and secure by using Flat Head Screwdriver (V).
2. **Attach the Left & Right Side Panels (B&C).** Insert the Eccentric Cams (L) into the pre-drilled holes of the Left Side Panel (B) and Right Side Panel (C), making sure the “X” pattern is facing out and the arrow points toward the pre-drilled hole in the edge of Side Panels (B&C). Place the pre-drilled holes in edges of Side Panels (B&C) over the Connecting Bolts (J) of the Top Assembly (A). Turn the Eccentric Cams (L) clockwise to secure the Top Assembly (A) to Side Panels (B&C) by using Flat Head Screwdriver (V). Refer to Illustration #1.
3. Cover Eccentric Cams (L) with Plastic Caps (M).

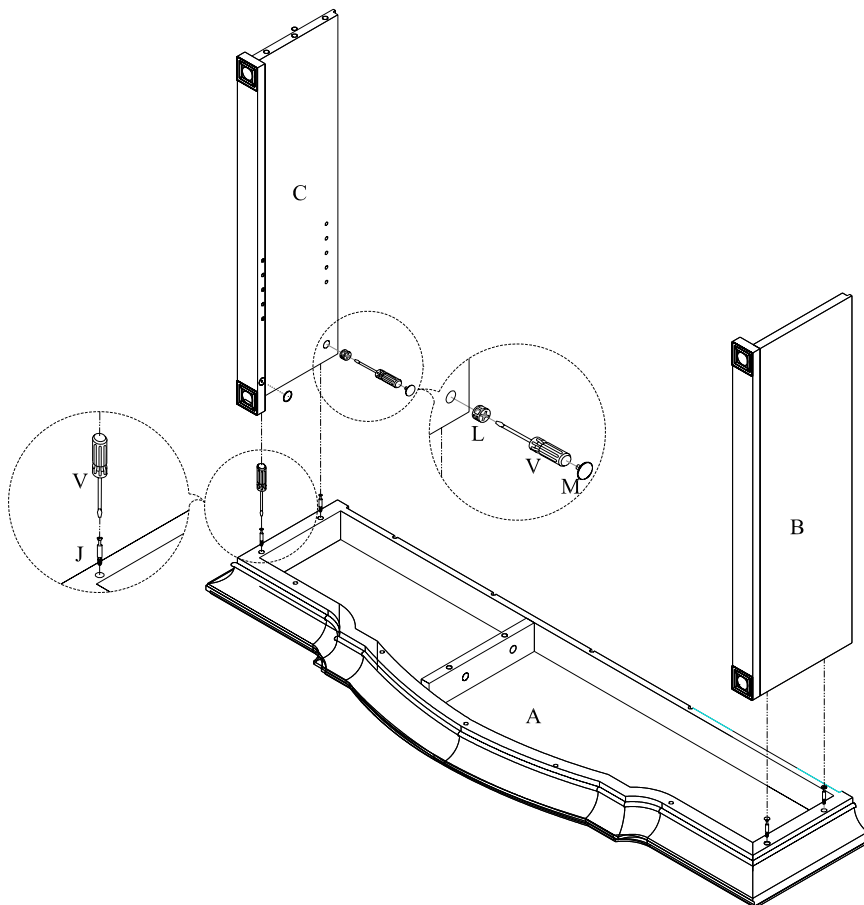


Illustration #1



1870569

Morgan Storage Hutch – Antique White

Attach the Fixed Shelf

Parts required

C.	Right Side Panel	1 pc	L.	Eccentric Cams	2 pcs
D.	Fixed Shelf	1 pc	M.	Plastic Caps	2 pcs
J.	Connecting Bolts	2 pcs	V.	Flat Head Screwdriver	1 pc

4. **Attach the Fixed Shelf (D).** Insert the Connecting Bolts (J) into the pre-threaded holes on the Right Side Panel (C) and secure by using Flat Head Screwdriver (V). Insert the Eccentric Cams (L) into the pre-drilled holes of Fixed Shelf (D), making sure the “X” pattern is facing out and the arrow points toward the pre-drilled hole in the edge of Fixed Shelf (D). Insert the Connecting Bolts (J) into the pre-drilled holes on Fixed Shelf (D) and into the Eccentric Cams (L). Turn the Eccentric Cams (L) clockwise to secure the Fixed Shelf (D) to Right Side Panel (C) with Flat Head Screwdriver (V). Refer to Illustration #2.
5. Cover Eccentric Cams (L) with Plastic Caps (M).

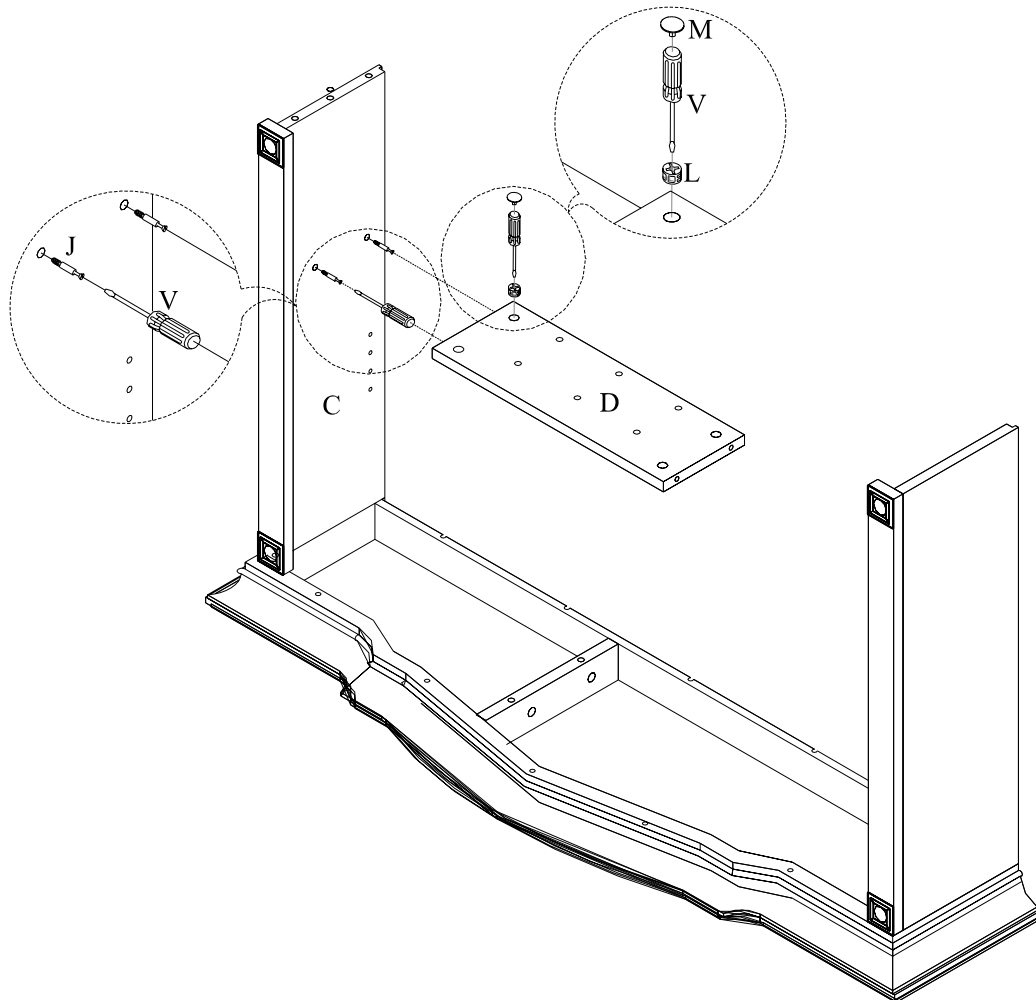


Illustration # 2



1870569

Morgan Storage Hutch – Antique White

Attach the Middle Panel

Parts required

D. Fixed Shelf	1 pc	M. Plastic Caps	2 pcs
E. Middle Panel	1 pc	R. Allen Head Bolts	2 pcs
J. Connecting Bolts	2 pcs	S. Flat Washers	2 pcs
V. Flat Head Screwdriver	1 pc	T. Lock Washers	2 pcs
L. Eccentric Cams	2 pcs	Z. Allen Head Wrench	1 pc

6. **Attach the Middle Panel (E).** Insert the Connecting Bolts (J) into the pre-threaded holes on the Middle Panel (E) and secure by using Flat Head Screwdriver (V). Insert the Eccentric Cams (L) into the pre-drilled holes in Fixed Shelf (D), making sure the “X” pattern is facing out and the arrow points toward the pre-drilled hole in the edge of Fixed Shelf (D). Insert the Connecting Bolts (J) of the Middle Panel (E) into the pre-drilled holes in edge of Fixed Shelf (D) and into the Eccentric Cams (L). Turn the Eccentric Cams (L) clockwise to secure the Fixed Shelf (D) to Middle Panel (E) with Flat Head Screwdriver (V). Align the pre-threaded holes in the Middle Panel (E) with the pre-drilled holes on the Top Assembly (A). Secure with Allen Head Bolts (R), Flat Washers (S), & Lock Washers (T) by using Allen Head Wrench (Z). Refer to Illustration #3.
7. Cover Eccentric Cams (L) with Plastic Caps (M).

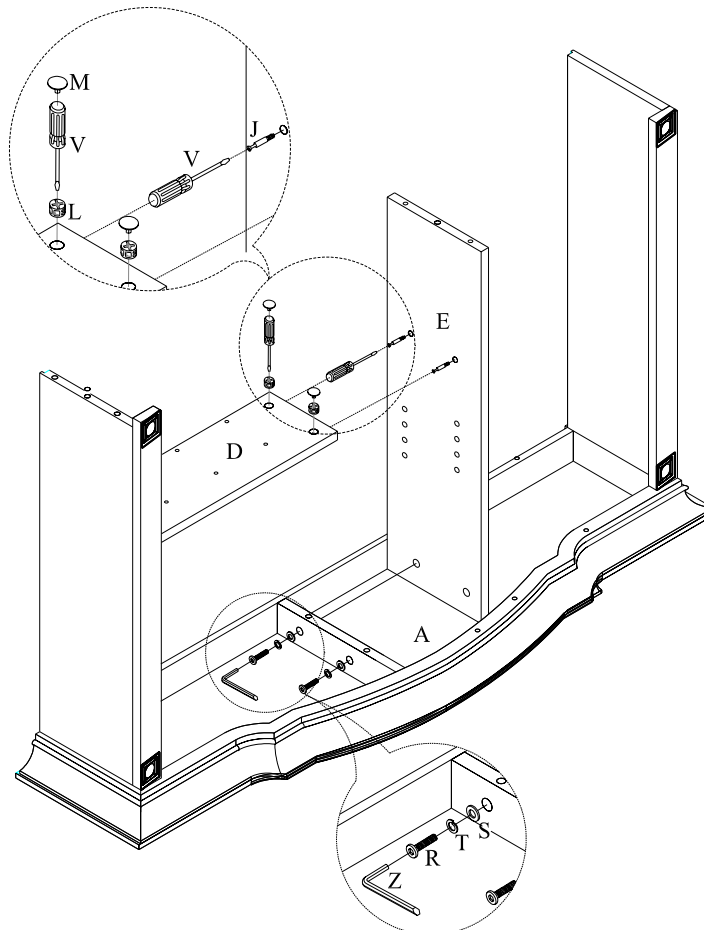


Illustration #3



1870569

Morgan Storage Hutch – Antique White

Attach the Dividers & Bottom Panel

Parts required

D. Fixed Shelf	1 pc	Q. Confirmat Screws	4 pcs
H. Bottom Panel	1 pc	Z. Allen Head Wrench	1 pc
I. Dividers	3 pcs		

8. **Attach the Dividers (I).** Insert the dowels in short edges of the Dividers (I) into the pre-drilled holes in Fixed Shelf (D). Refer to Illustration #4.
9. **Attach the Bottom Panel (H).** Insert the dowels of the Middle Panel (E), Dividers (I), and Right Side Panel (C) into the pre-drilled holes of the Bottom Panel (H). Align the pre-drilled holes in the Right Side Panel (C) and Middle Panel (E) with the pre-drilled holes of the Bottom Panel (H). Secure with Confirmat Screws (Q) by using Allen Head Wrench (Z). Refer to Illustration #4.

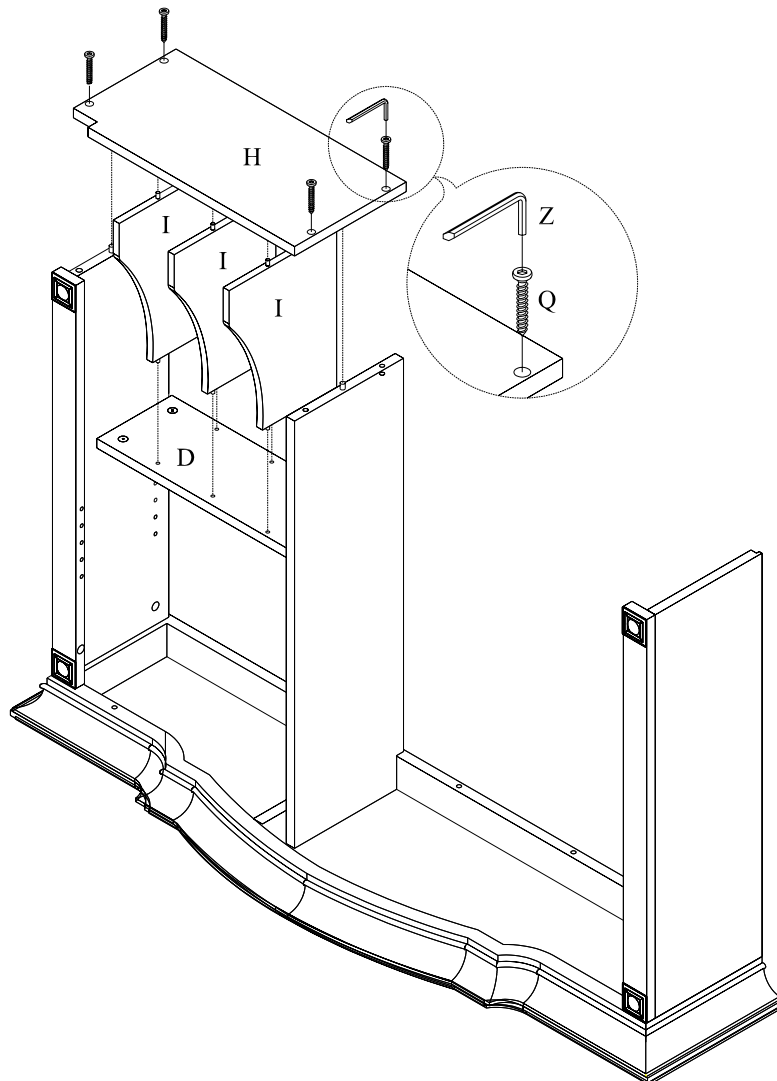


Illustration #4



1870569

Morgan Storage Hutch – Antique White

Attach the Left Back Panel & Right Back Panel

Parts required

A. Top Assembly	1 pc	F. Right Back Panel	1 pc
B. Left Side Panel	1 pc	G. Left Back Panel	1 pc
C. Right Side Panel	1 pc	U. Phillips Head Screwdriver	1 pc
E. Middle Panel	1 pc	N. Pan Head Screws (M6 x12)	30 pcs

10. **Attach the Left Back Panel (G).** Place the Left Back Panel (G) into the notches in the back edge of the Left Side Panel (B) and the Top Assembly (A). Secure the Left Back Panel (G) to the Left Side Panel (B), Middle Panel (E), and Top Assembly (A) with Pan Head Screws (N) using Phillips Head Screwdriver (U). Refer to Illustration #5.
11. **Attach the Right Back Panel (F).** Place the Right Back Panel (F) into the notches in the back edge of the Right Side Panel (C) and the Top Assembly (A). Secure the Right Back Panel (F) to the Right Side Panel (C), Middle Panel (E), and Top Assembly (A) with Pan Head Screws (N) using Phillips Head Screwdriver (U). Refer to Illustration #5.

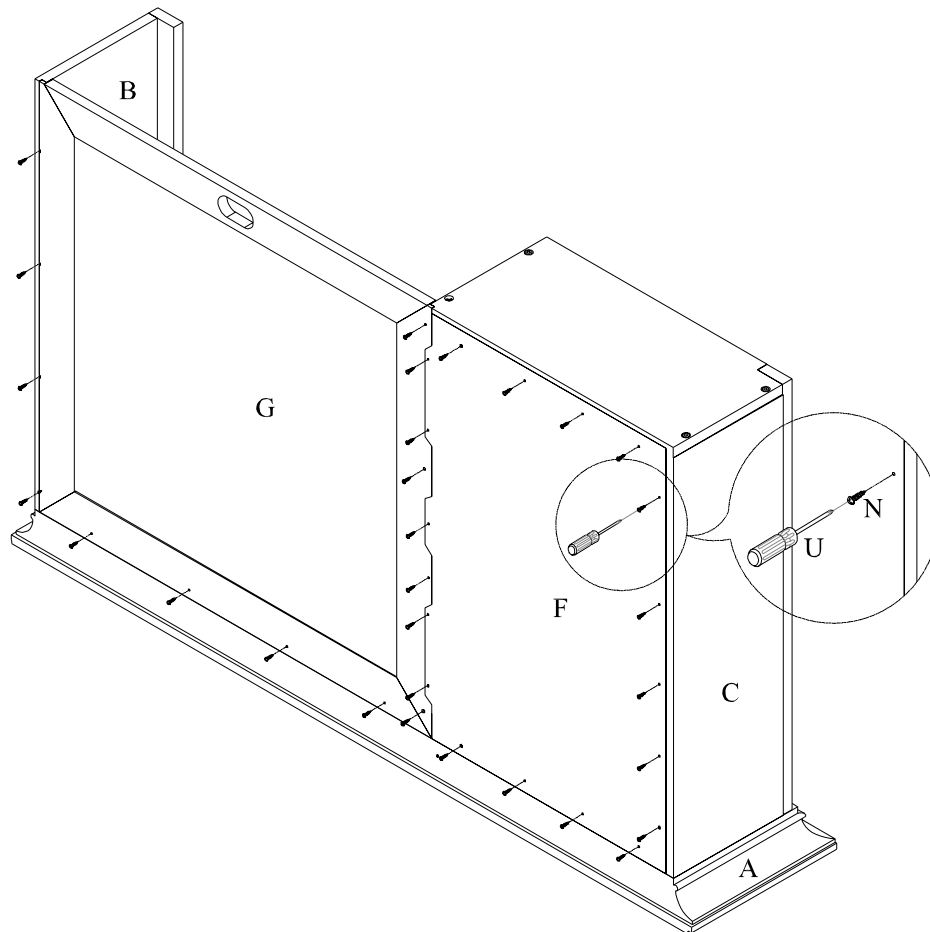


Illustration # 5



1870569

Morgan Storage Hutch – Antique White

Install the Adjustable Shelf

Parts required

C. Right Side Panel	1 pc	K. Adjustable Shelf	1 pc
E. Middle Panel	1 pc	W. Shelf Supports	4 pcs

12. **Install the Adjustable Shelf (K).** Insert the Shelf Supports (W) into the desired pre-drilled holes of Right Side Panel (C) and Middle Panel (E). Place the Adjustable Shelf (K) onto the Shelf Supports (W). Refer to Illustration #6.

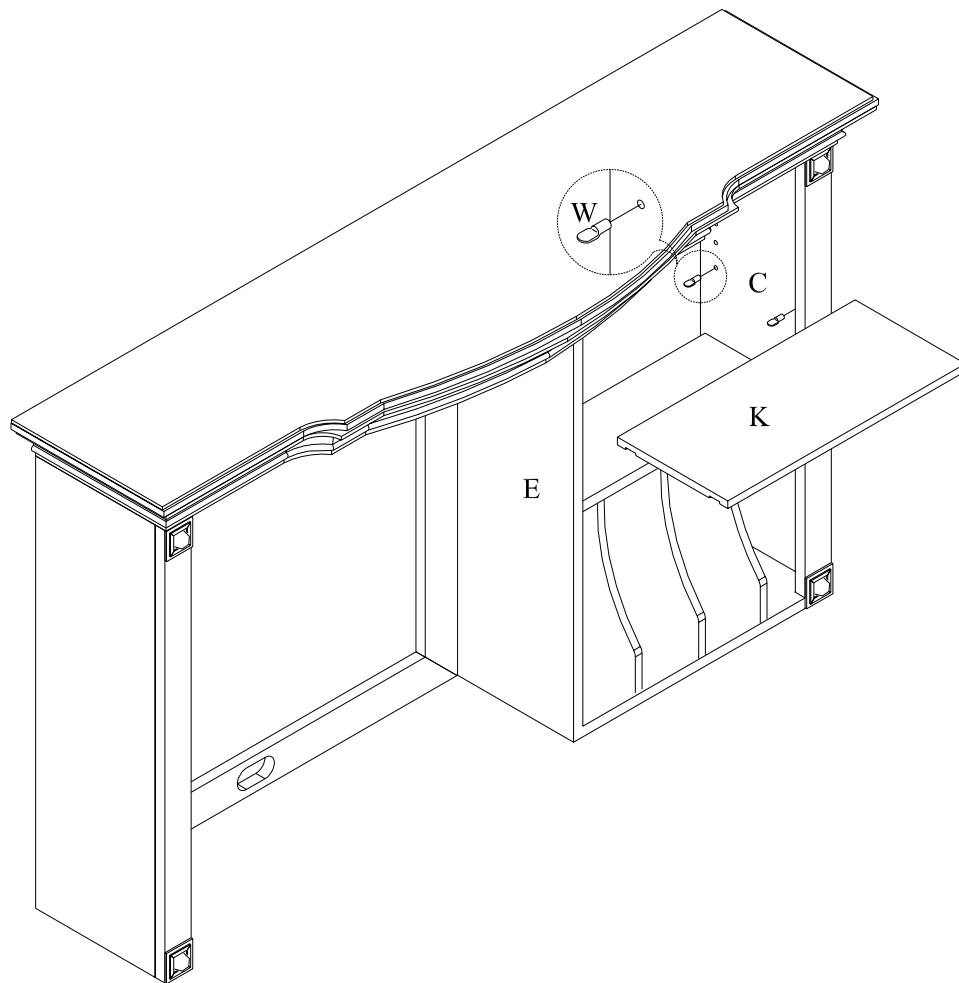


Illustration #6



1870569

Morgan Storage Hutch – Antique White

Attach the Angle Braces & Connecting Plates

Parts required

A.	Top Assembly	1 pc	O.	Long Phillips Head Screws (M6 x15)	8 pcs
X.	Angle Braces	2 pcs	P.	Short Phillips Head Screws (M8 x12)	2 pcs
Y.	Connecting Plates	2 pcs	U.	Phillips Head Screwdriver	1 pc

13. **Attach the Connecting Plates (Y).** Place the hutch in position over the desired furniture in your home. Secure the hutch to the furniture with Connecting Plates (Y) and Long Phillips Head Screws (O) using Phillips Head Screwdriver (U). See Illustration #7.
14. **Attach Angle Braces (X) to wall.** Place the hutch in the desired location against the wall. Mark desired locations for the Angle Braces (X) through the cut-out in each Angle Brace (X). Move the hutch aside. Attach the Angle Braces (X) to the wall. See note below for attachment hardware.
15. **Attach Angle Braces (X) to hutch.** Secure the Angle Braces (X) to Top Assembly (A) with a Short Phillips Head Screws (P) using Flat Phillips Head Screwdriver (U).

Note:

Hanging Devices

If, after assembly, you desire to secure the item to a wall to prevent a hazard to children from tipping over, hanging hardware will be needed. Due to the many different types of materials used in home construction you will need to choose an appropriate wall fastener to ensure this item is securely hung. Please consult your local hardware specialist in selecting appropriate hardware and determining proper installation procedures based on your particular needs.

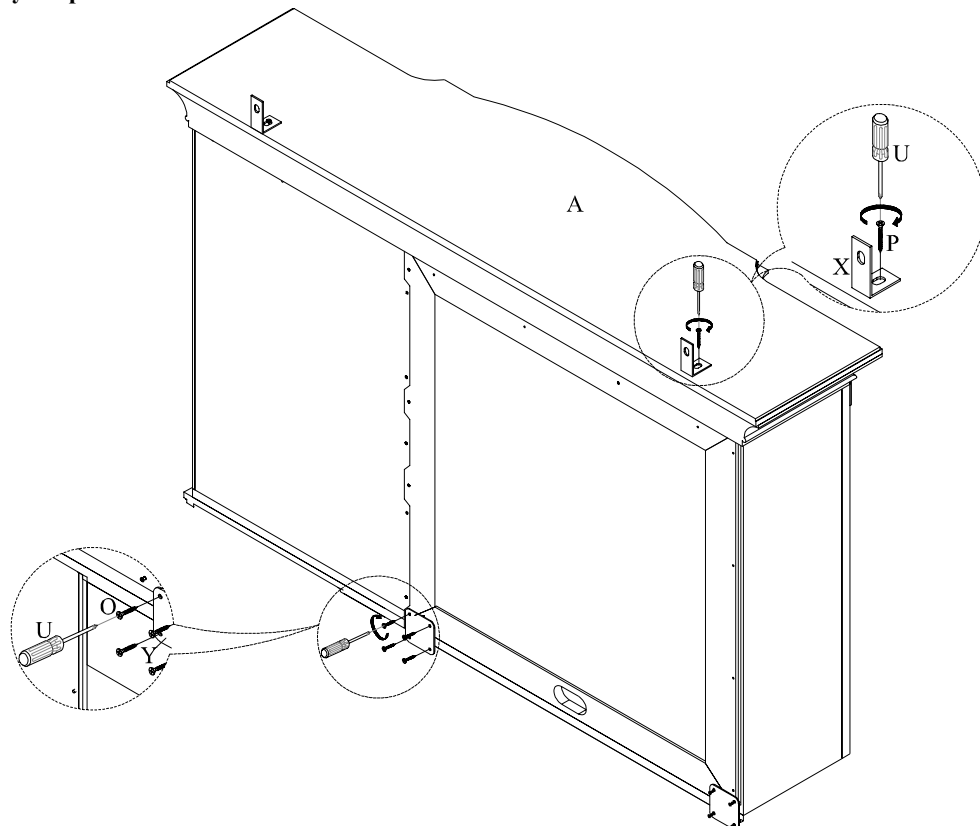


Illustration # 7